


CODE	DESCRIPTION
4024R+color	Sprayhead
4119R+color	Spout
3891R	O-ring kit
3810R+color	Handle
3918R+color	Collar
3707R	Cartridge
4048R+color	Plinth
3901R	Flexi-tail
4046R	Fixing Kit
3946R	Weight
3905R	Flexible

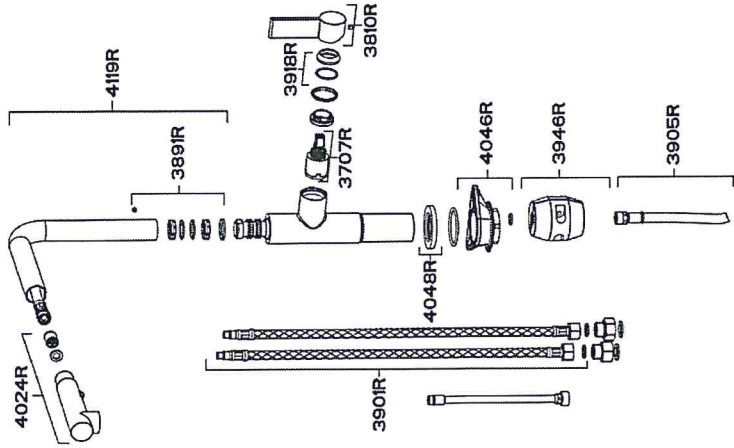

In the unlikely event you find a part missing please contact our Customer Service Help line on 01684 299555 for immediate dispatch of part.

Maintenance:

Where an aerator is fitted to the outlet of the spout, it will need occasional cleaning. This will be evident when the water flow slows down to an unacceptable level. To accomplish this unscrew the outlet in an anti-clockwise direction and remove the mesh. Immerse the mesh in a suitable descaling fluid overnight, rinse thoroughly in clean water and re-install.

Remember:

Maximum water supply pressure: 75 PSI (5 bar)
Maximum hot-water supply temperature: 70 °C
Recommended hot-water supply temperature: 65 °C

If these temperatures or water pressure are exceeded damage to the tap can result. A pressure reducing valve may be required to be fitted in high water pressure situations.

Please read these instructions before you install and use the tap. All designs, descriptions and dimensions are subject to change without notice.

Preparation

Flush the plumbing system before installing the mixer tap. This is to avoid plumbing residues clogging the mesh of the aerated outlet, or possibly damaging the valve's washers. This is especially important where extensive plumbing work has been carried out.

First shut off your water heating system then, with your mains stop cock closed, open the lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes are empty. (The hot water storage cylinder always remains full).

Installation

- First screw the threaded stud into the mixer body. Screw the flexi-tails into the mixer body, and fully hand tighten.
- After making any necessary alterations to existing pipework, pass the plinth over the flexi-tails and fit in position.
- The shaped upstand on the plinth will locate in the tap body and the "O" ring should be placed in the recess to make a seal with the sink.


- When the tap is in position slide the nylon bracing plate up to the underside of the sink together with the retaining plate and gasket, and secure by screwing the fixing nut finger tight.

- Check that the mixer body and plinth are correctly positioned and fully tighten fixing nut.

Screw the copper tail A on the body and tighten

- Screw the flexi B onto the tail A making sure that the gasket C is in the correct position and tighten. If necessary use adaptor for flexi.

- It is recommended that 15mmx15mm compression fittings be used to connect mixer to supply pipes. Cold is connected to the right and hot on the left when viewed from the front.

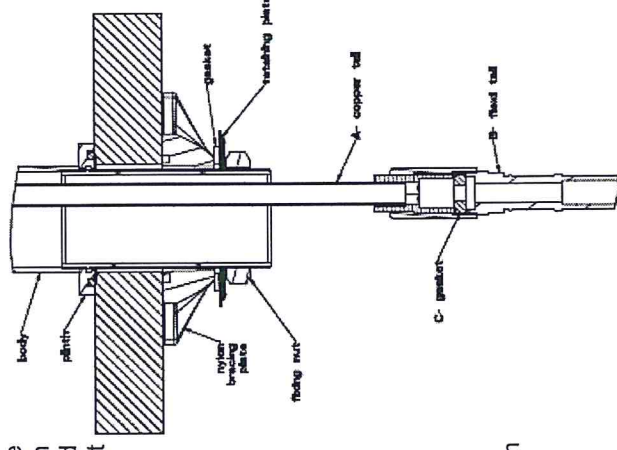

AFTER CARE:

To maintain the appearance of this tap, ensure that it is regularly cleaned only using a clean, soft damp cloth. A solution of warm water and a mild liquid detergent may be used where necessary, and then the fitting rinsed thoroughly and wiped dry. Abrasive cleaners, scouring cleaners and acid cleaners **must not be used** under any circumstances. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners. Avoid contact with all solvents and any harsh household chemicals. You will damage the plated finish and void your guarantee.

GUARANTEE AND LIABILITY


In the unlikely event that you should experience any defect in the material or workmanship of your mixer tap within 2 years of purchase, we will replace the faulty part free of charge. Decorative surface finishes and valves are guaranteed for one year from the date of purchase provided that our advice concerning care has been observed and no scouring agents have been used. This is provided that the mixer or tap has been used for normal domestic purposes in the UK and that the care, installation and maintenance instructions have been observed. Scuff and scratches caused by normal wear and tear, improper installation or accidental damage are excluded from this guarantee. You should retain a copy of your dated invoice as proof of purchase to validate any claims under this guarantee. No other warranties, express or implied, are made, including merchantability or fitness for a particular purpose.

SPARE PARTS AND SERVICE

Contact	STERLING
Phone	01684 299555
Fax	01684 290958
e-mail	sales@sterling.eu.com
web-site	www.sterling.eu.com

clearwater

AURIGA

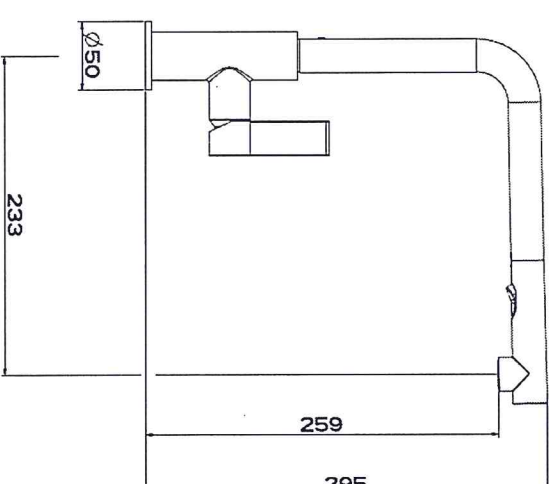

Fitting Instructions & Contents List

Please keep these instructions for future reference and request of replacement parts.